

Spring 2023

**DCN LAB** 

Submitted by: Maaz Habib

Registration No.: 20PWCSE1952

Class Section: C

"On my honor, as student of University of Engineering and Technology, I have neither given nor received unauthorized assistance on this academic work."

## **Submitted to:**

Engr. Yasir Saleem

Department of Computer Systems Engineering
University of Engineering and Technology, Peshawar

**CSE 303L: Data Communication and Computer Networks** 

**Credit Hours: 1** 

**Contact Hours: 3** 

## LAB ASSESSMENT RUBRIC

Demonstration of Concepts	Poor (Does not meet expectation (1))	Fair (Meet Expectation (2- 3))	Good (Exceeds Expectation (4- 5)	Score
	The student failed to demonstrate a clear understanding of the assignment concepts	The student demonstrated a clear understanding of some of the assignment concepts	The student demonstrated a clear understanding of the assignment concepts	30%
Accuracy	The student misconfigured enough network settings that the lab computer couldn't function properly on the network	The student configured enough network settings that the lab computer partially functioned on the network	The student configured the network settings that the lab computer fully functioned on the network	30%
Following Directions	The student clearly failed to follow the verbal and written instructions to successfully complete the lab	The student failed to follow the some of the verbal and written instructions to successfully complete all requirements of the lab	The student followed the verbal and written instructions to successfully complete requirements of the lab	20%
Time Utilization	The student failed to complete even part of the lab in the allotted amount of time	The student failed to complete the entire lab in the allotted amount of time	The student completed the lab in its entirety in the al	20%

## **Lab 01**

# PC Network TCP/IP Configuration

## **OBJECTIVES OF THE LAB**

Following topics will be covered in this lab

- Gather information including connection, host name, Layer 2 MAC address and Layer
   TCP/IP network address information.
- Compare network information to other PCs on the network.
- Identify tool used for discovering a computer's network configuration.

## ABOUT IPCONFIG

**ipconfig (Internet Protocol Configuration)** in Microsoft Windows is a console application. It can be used from MS-DOS shell to display the network settings currently assigned and given by a network. This command can be utilized to verify a network connection as well as to verify network settings.

#### Usage

ipconfig [/allcompartments] [ /? | /all | /renew [adapter] | release [adapter] |/flushdns | /displaydns | /registerdns | /showclassid adapter | /setclassid adapter [classidtoset] ]

## **Option Description**

\_\_\_\_\_

/? Display help message

/all Display full configuration information

/allcompartments Display information for all compartments

/release Release the IP address for the specified adapter

/renew Renew the IP address for the specified adapter

/flushdns Removes the DNS Resolver cache

/registerdns Refreshes all DHCP leases and re-registers DNS name

/displaydns Display the contents of the DNS Resolver Cache

/showclassid Displays all the DHCP class IDs allowed for adapter

/setclassid Modifies the DHCP class ID

The default is to display only the IP address, subnet mask and default gateway for each adapter bound to TCP/IP.

For Release and Renew, if no adapter name is specified, then the IP address leases for all adapters bound to TCP/IP will be released or renewed.

For Setclassid, if no ClassId is specified, then the ClassId is removed.

# Gathering TCP/IP configuration information


### Step 1

Establish and verify connectivity to the Internet. This ensures the computer has an IP address.



## Step 2

Press Start>Run Then type cmd.

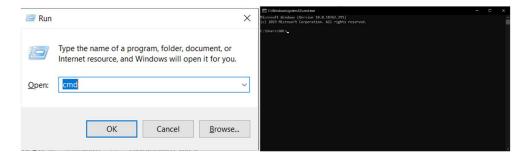

The following figure shows the Command screen. Type ipconfig and press the Enter key. The spelling of ipconfig is critical while case is not. It is short for IP Configuration.

Figure 1.1 Command Screen for ipconfig

Figure 1.2 Command Screen for ipconfig

This first screen shows the IP address, subnet mask, and default gateway. The IP address and the default gateway should be in the same network or subnet, otherwise this host would not be able to communicate outside the network. In the figure the subnet mask tells us that the first three octets must be the same to be in the same network.

Note: If this computer is on a LAN, the default gateway might not be seen if it is running behind a Proxy Server. Record the following information for this computer.

# Step 3

Record the following TCP/IP information for atleast THREE computers

	Computer 1	Computer 2	Computer 3
		(Neighbor 1)	(Neighbor 1)
IP Address	192.168.14.180	192.168.137.100	192.168.14.93
Subnet Mask	255.255.255.0	255.255.255.0	255.255.255
Lease Time	Tuesday, February	Tuesday, February	Tuesday, February
	28, 2023 3:25:04 PM	28, 2023 3:32:24 PM	28, 2023 3:26:57 PM
Mac Address	A0-51-0B-D2-A8-3E	B8-08-CF-C9-7C-AF	48-5F-99-3C-82-54
Default Gateway	192.168.14.245	192.168.137.1	192.168.14.245
DNS Address	192.168.14.245	192.168.137.1	192.168.14.245
DHCP Address	192.168.14.245	192.168.137.1	192.168.14.245

Difference between Fig.1 and Fig.2: ETHERNET ADAPTER LOCAL AREA CONNECTION

## Step 4

Compare the TCP/IP configuration of this computer to others on the LAN

If this computer is on a LAN, compare the information of several machines.

## Are there any similarities?

• Yes, Subnet Mask

## What is similar about the IP addresses?

• The network part is same.

## What is similar about the default gateways?

• The network part is same.

The IP addresses should share the same network portion. All machines in the LAN should share the same default gateway.

### **Record a couple of the IP Addresses:**

192.168.137.100 192.168.14.93 192.168.137.1
---

## Step 5

Check additional TCP/IP configuration information

To see detailed information, type ipconfig /all and press Enter. The figure shows the detailed IP configuration screen.

```
_ 🗆 ×
C:\WINDOWS\system32\cmd.exe
Microsoft Windows XP [Version 5.1.2600]
(C) Copyright 1985-2001 Microsoft Corp.
C:\Documents and Settings\Waqas>ipconfig /all
Windows IP Configuration
         waqas-pc
                                                      Unknown
Ethernet adapter Wireless Network Connection:
         Intel(R) PRO/Wireless 3945ABG Networ
 Description
Connection
Physical Address
Dhop Enabled
Autoconfiguration Enabled
IP Address
Subnet Mask
Default Gateway
DUCD Convey
                                                       00-1F-3C-5C-F8-C7
Ethernet adapter Local Area Connection:
         Media State
Description
                                                      Media disconnected
Intel(R) PRO/100 VE Network Connecti
          Physical Address. .
                                                    : 00-1E-EC-6D-B3-63
 :\Documents and Settings\Waqas>_
```

### Figure 1.3 Command Screen for ipconfig /all

The host name, including the computer name and NetBIOS name should be displayed. Also, the

DHCP server address, if used, and the date the IP lease starts and ends should be displayed. Look over the information. Entries for the DNS, used in name resolution servers, may also be present.

The previous figure reveals that the router is performing both DHCP and DNS services for this network. This would likely be a small office or home office (SOHO) or small branch office implementation.

Notice the Physical Address (MAC) and the NIC model (Description).

- Physical Address: A0-51-0B-D2-A8-3E
- Description: Intel(R) Wireless-AC 9560 160MHz

\_\_\_\_\_

Write down the IP addresses of any servers listed:

DHCP SERVER: 192.168.14.245
 DNS SERVER: 192.168.14.245

Write down the computer Host Name:

• Host Name: HP-COREi5

Write down the Host Names of a couple other computers:

- <u>DESKTOP-EPS9TRU</u>
- HP

Do all of the servers and workstations share the same network portion of the IP address as the student workstation?

• <u>No</u>

It would not be unusual for some or all of the servers and workstations to be in another network. It means that the computer default gateway is going to forward requests to the other network.

Step 6

Close the screen when finished examining network settings.

Repeat the previous steps as necessary. Make sure that it is possible to return to and interpret this screen.

Based on observations, what can be deduced about the following results taken from three computers connected to one switch?

## Computer 1

IP Address: 192.168.5.13

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.12.1

Computer 2

IP Address: 192.168.5.5

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.12.1

Computer 3

IP Address: 192.168.11.97

Subnet Mask: 255.255.255.0

Default Gateway: 192.168.12.1

## Should they be able to talk to each other?

yes

## Are they all on the same network? Why or why not?

• Yes, because their Default Gateway: 192.168.12.1 is same

## Step 7

Flush the DNS resolver cache

```
C:\Users\Hp>ipconfig /flushdns
Windows IP Configuration
Successfully flushed the DNS Resolver Cache.
C:\Users\Hp>
```

#### Step 8

Renew a DHCP-assigned IP address configuration

#### Step 9

List the function of DNS and DHCP server. Also list the address of these servers

## **Function of DNS & DHCP:**

Domain Name System (DNS):

An Internet service that translates domain names (e.g., its.umich.edu) into IP addresses.

• Dynamic Host Configuration Protocol (DHCP):

A protocol for automatically assigning IP addresses and other configurations to devices when they connect to a network.

## Address of the servers:

